

To Change Date and Time on IP LDK 100.

From Main Telephone Only. (This will be a 30 button or 24 buttonphone and will ring if 0 is dialled from any extension)

- 1 Press Trans/Pgm
- 2 Dial 041
- 3 Enter the date in MM/DD/YY format
- 4 Press Hold/Save
- 5 Enter the time in HH:MM format
- 6 Press Hold/Save
- 7 You should hear a confirmation tone.