

## To Change Date and Time on NEXER

From Main Telephone Only. To find the main phone dial 0 from any telephone and where it rings will be the main phone.phone.

- 1 Press Trans/Pgm
- 2 Dial 041
- 3 Press Hold/Save
- 4 Enter the time in HH:MM format
- 5 Press Hold/Save
- 6 You should hear a confirmation tone.